 


U700 Universal Wifi Router 300M HIGH GAIN ROUTER




1. PC Postavke (Windows 7)


1) Idite na start > control panel > network and internet > network and sharing center > change adapter settings > local area connection te izaberite network card, zatim desni klik na "Local area connection", izaberite properties

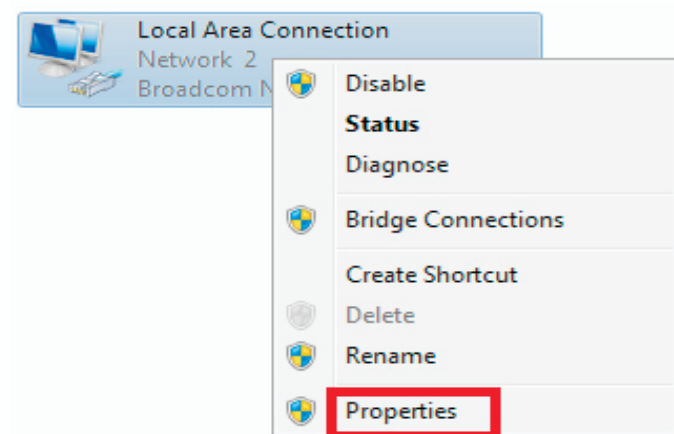

2) Izaberite Internet protocol version 4 (TCP/IPv4, kliknite na properties)

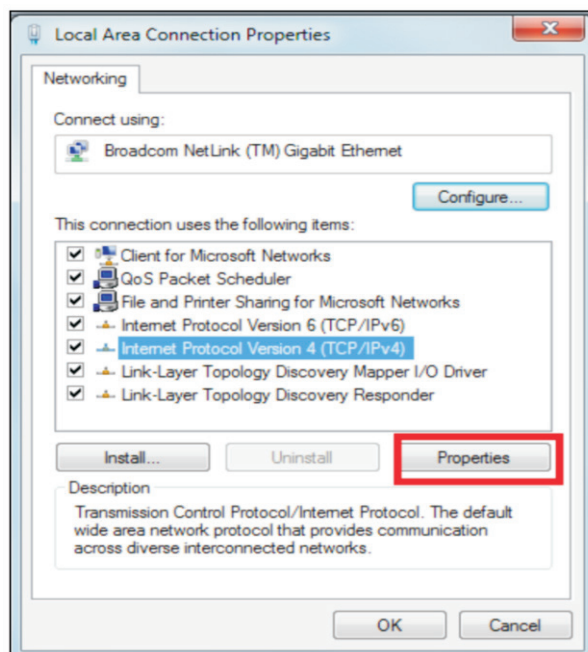


3) Izaberite Obtain an IP address automatically, Obtain DNS server address automatically, potvrdite sa OK, vratite se na predhodni MENU i potvrdite sa OK.

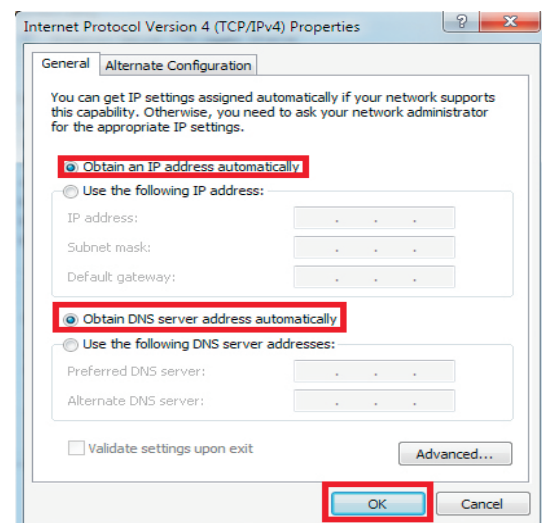

2. Router postavke (Windows 7)

1. Otvorite browser, unesite http://192.168.1.1 te kliknite na GO
2. Unesite username i password u prostor za login. Tvorničke postavke za username i password su "admin"

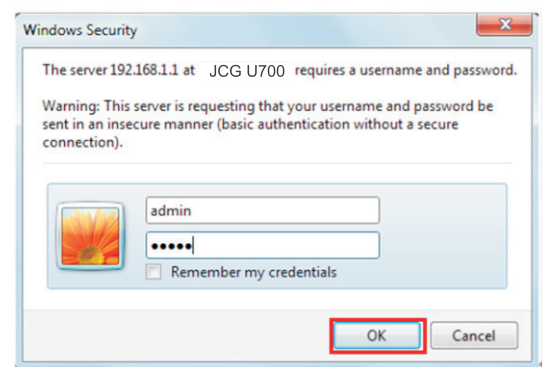

Potvrdite sa OK

3. Pojavit će se postavke routera



4. Unesite ime mreže SSID i lozinku

Service Set Identifier (SSID): JCG-000014
Pre-Shared Key: 0k0k0k0k

5. WAN postavke

Metoda 1: Automatski (DHCP)

WAN Connection Type: ☐ Fixed IP ☒ Auto Config (DHCP) ☐ PPPoE Dial-up
Host Name: JCG-000013
Clone MAC Address: 00:00:00:00:00:00

Metoda 2: Fiksna IP adresa

Ako ste odabrali fiksnu IP adresu, pojavit će se postavke za statičku IP adresu koje trebate unijeti: IP address, Subnet mask Default gateway i DNS

WAN Connection Type: ☒ Fixed IP ☐ Auto Config (DHCP) ☐ PPPoE Dial-up
IP Address: 172.1.1.1
Subnet Mask: 255.255.255.0
Default Gateway: 172.1.1.254
Domain Name Server (DNS): 0.0.0.0
Clone MAC Address: 00:00:00:00:00:00

Metoda 3: PPPoE konekcija


Ako koristite PPPoE konekciju, pojavit će se PPPoE postavke koje trebate unijeti (username i password vašeg IPS-a)

WAN Connection Type: ☐ Fixed IP ☐ Auto Config (DHCP) ☒ PPPoE Dial-up
User Name: pppuser
Password: *****
Clone MAC Address: 00:00:00:00:00:00


Izaberite Vašu najbolju WAN konekciju i kliknite na "save/apply"

3. Wireless konekcija

1) Idite na start > control panel > network and internet > network and sharing center > change adapter settings > wireless network connection, zatim desni klik na "Wireless network connection", izaberite "Connect/disconnect"

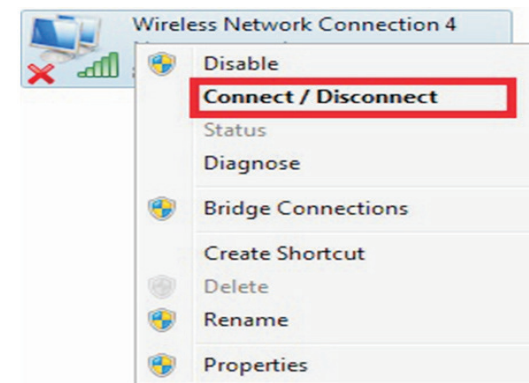


2. Izaberite wireless network name (SSID) u listi konekcija te kliknite na "Connect"

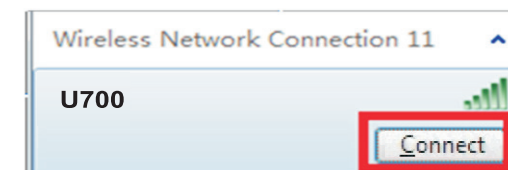


3. Unesite wifi ključ i kliknite na "OK"

Napomena: na tvorničkim postavkama uređaja SSID i Network key se nalaze na donjoj strani uređaja

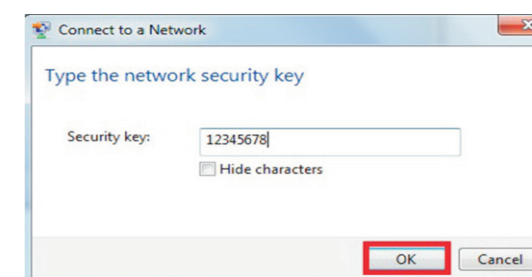

4. Konekcija je uspješna

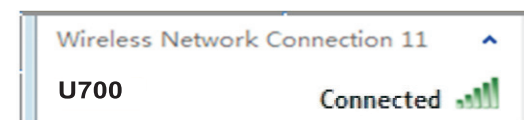

4. FAQs

Kako resetirati uređaj na tvorničke postavke?

a) Držite pritisnutu tipku RESET 5-10 sekundi (uređaj mora biti uključen)

Laptop ne može da nađe wifi signal

a) Provjerite da li ste uključili wifi na routeru

b) Provjerite wifi na Vašem laptopu

c) Provjerite driver na wireless adapteru